


System Remote Indicator Panel (Optional)

The Remote Indicator Panel provides an illuminated indication of several system operating parameters. LED indicators are labeled below. (Fig. 1)

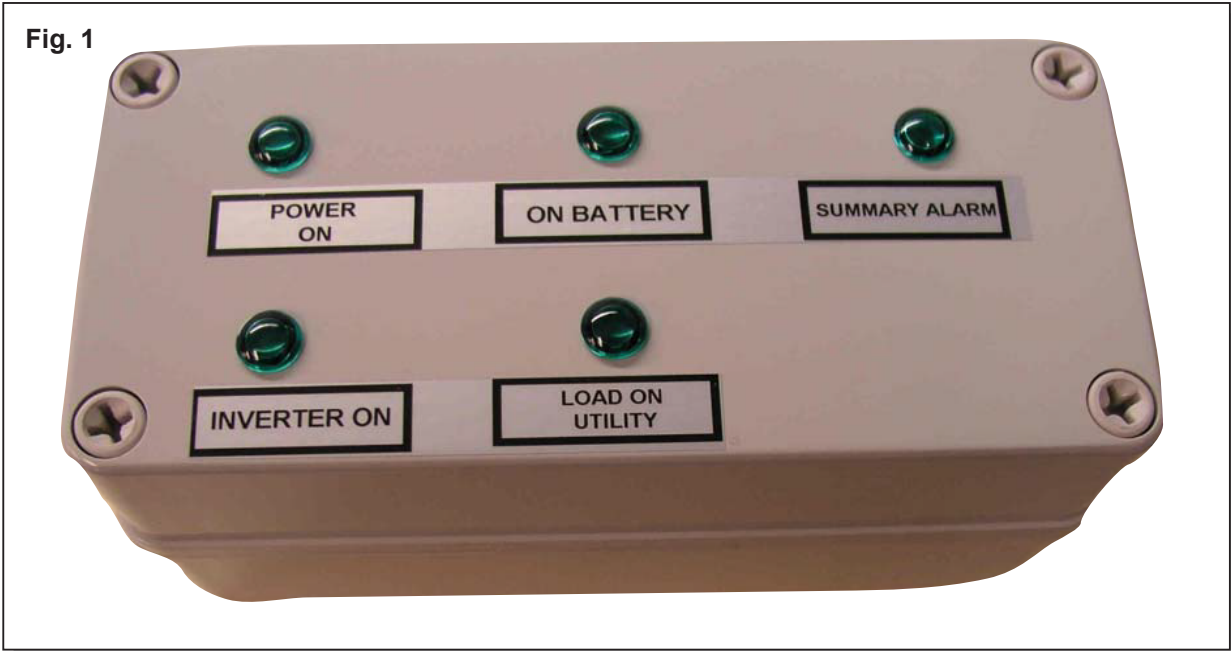

Terminations from the Remote Indicator Panel are made to the terminal block on the Inverter Control Panel. Terminations are as indicated. All connections must be made to the top of the Terminal Block. (Fig. 2)

